

ExactLogic BACnet Communicating Thermostat

EXL01627 Sequence Datasheet

Fan Coil with Modulating Fan and Heat or Cool
Floating Heating and Cooling



BACnet is a registered trademark of ASHRAE. ASHRAE does not endorse, approve or test products for compliance with ASHRAE standards. Compliance of listed products to requirements of ASHRAE Standard 135 is the responsibility of the BACnet International. BTL is a registered trademark of the BACnet International.



DataSheet Rev 1.20.001/4.0
October 9, 2023

Operating Sequence

Standard Occupied

During normal occupied operation the display will show the current room temperature. The first press of either right pair of keys will show the current room setpoint. Additional presses will adjust the setpoint up or down by 0.5 degrees. The thermostat keypad will time out after 5 seconds without a key press, and the display will switch back to displaying the room temperature.

The left pair of keys allows for the adjustment of the fan speed. The current mode is shown with the first key press; additional key presses will show the adjustment to the mode. AV-62 is used to select the number of fan speeds, and AV-63 will show what speed the fan is currently set to. Refer to the table below for the values of AV-62 (Fan Mode Status) and AV-63 (Fan Speed Status)

AV-62	Mode
0	AUTO Only
1	AUTO-ON
2	OFF-AUTO-ON
3	OFF-1-2-AUTO
4	OFF-1-2-3-AUTO

AV-63	Fan Speed
0	OFF
1	Fan Speed 1
2	Fan Speed 2
3	Fan Speed 3
4	AUTO
5	ON

Internal/External Thermistor Control

The thermostat control sequence can use the internal thermistor or an external thermistor connected to AI-2. Setting BV-67 to OFF (default) the thermostat will use the internal thermistor. Setting BV-67 to ON the control sequence will use the external thermistor.

The current controlling temperature is located at AV-20. This value will be displayed on the LCD of the thermostat and should be used on any workstation displays.

Control Sequence – Fan Start

There are two modes that can be configured to start the fan via BV-69. When BV-69 is INACTIVE (default), the fan will be started by schedule (BO-5), afterhours setback, or by a night heating/cooling call. When BV-69 is ACTIVE, the fan will start by the heating or cooling signals. There is a configurable setpoint for heating (AV-45) and cooling (AV-46) that can be used to determine at what percentage the fan should start. The Fan Start command is at BO-0.

Control Sequence – Fan Modulation

The fan modulation is based off the heating or cooling signal. There are three setpoint used to set the fan speed, the Maximum Heating Fan Speed (AV-42), the Maximum Fan Speed (AV-43), and the Minimum Fan Speed (AV-44). The modulating signal will be disabled if the Fan Start Command (BO-0) is INACTIVE.

Control Sequence – Heat / Cool

Heating and Cooling is achieved using power open/power closed (floating) digital outputs or by a modulating analog output, which are tied to the heating or cooling signal. BV-52 is used to select whether the modulating output is used for Heating or Cooling.

Standard Unoccupied

During unoccupied operation the thermostat will continue to display the room temperature. When in an unoccupied state pressing one of the right pair of keys will display a message indicating the thermostat is in night mode, preventing the setpoint from being adjusted. To adjust the room setpoint when unoccupied the thermostat must be set to night override.

Control Sequence

When in the unoccupied mode, the room will be controlled by the unoccupied cooling/heating setpoints. The fan and cooling/heating stages will operate the same as the occupied control sequence.

Vacancy

If a room is known to be vacant, vacant setpoints can be used to override the unoccupied setpoints. By setting BV-70, a room will be controlled by the vacant cooling/heating setpoints (AV-64/65).

Night Override

Set the night override by pressing one of the left pair of keys. The display will switch to allow the user to set the night override time. Additional presses of the keys will adjust the time up or down by 0.5 hour increments. The night override can be increased up to the override limit set at AV-73, the default is 5 hours. When the thermostat is in night override, the first press of one of the left pair of keys will display the override time remaining. Additional key presses will add/subtract 0.5 hours to the time that was remaining. When the timer reaches zero the thermostat will return to the unoccupied mode.

In the night override mode, the right pair of keys can be used to adjust the room setpoint. The thermostat keypad will time out after 5 seconds without a key press, and the display will switch back to displaying the room temperature.

The thermostat can be set to night override by writing a value to AV-74 through BACnet. The value cannot exceed the night override limit set at AV-73. If the night override time is set higher than the limit, the night override timer will be set the limit. The night override limit default is 5 hours.

If the thermostat is commanded to the occupied mode while in night override, the override timer will be cleared to zero and the thermostat will enter the occupied mode.

Control Sequence

When the thermostat is in the override mode, the room will be controlled by the occupied cooling/heating setpoints. The fan and cooling/heating stages will operate the same as the occupied control sequence.

Note: There is no fan control in the override mode. The fan will run in the AUTO mode.

Motion/Humidity Option Card

The Motion/Humidity Option Card can be used for Motion Only, Humidity Only, or Motion/Humidity together. In order to use the Motion Sensor (either stand alone or with Humidity), BV-64 must be set to ACTIVE. The Humidity Sensor can be enabled by setting AV-31 to 4. These settings will automatically provide the required voltage to power the sensors. The motion sensor status will show on BI-1.

When the motion sensor, senses motion, it puts the unit in occupied "Active" Mode by writing to the Scheduled Occupied Command BO-5 at priority array entry 11, this will remain active until it does not see any motion for the entire duration of the time delay (AV-81 Units=seconds), it will then return to an inactive state. When the internal occupancy sensor is enabled by setting BV-64 to ACTIVE, the occupied mode is controlled only by the occupancy sensor. The optimum start warmup point, BV-41, and optimum start cooldown point, BV-42, will set the unit to the occupied mode and then return to the unoccupied mode until motion is sensed.

The Humidity value is shown on AI-1. The Humidity Sensor will automatically be scaled by setting AV-31 to 4.

Disabling of the Splash, Setup Menu, or Field Service Mode


When the thermostat is installed in a public location there may be times when the setup of the thermostat will need to be disabled to prevent tenants from changing the configuration while still giving them access to change the setpoints and control after hours modes. The following points have been added to allow this:

BV-57 = Setting ACTIVE will disable the "EXACTLOGIC" splash display after key presses

BV-58 = Setting ACTIVE will disable access to the Setup Menu where the Network/MAC/Baud Rate/etc are set

BV-59 = Setting ACTIVE will disable access to the Field Service Mode where Time/Schedule/Setpoints/etc are set

Installation

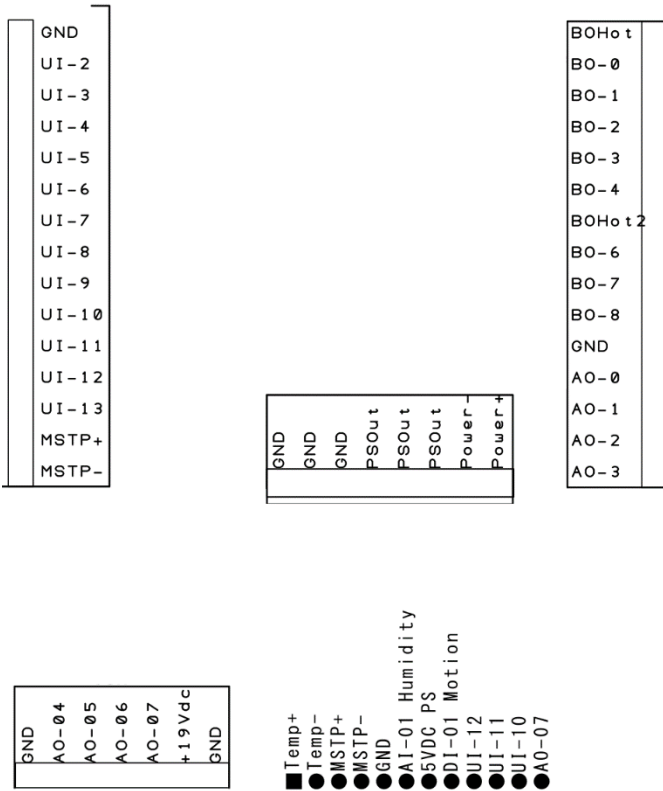

GND Neutral/Ground
 UI-2 Universal Input 2
 UI-3 Universal Input 3
 UI-4 Universal Input 4
 UI-5 Universal Input 5
 UI-6 Universal Input 6
 UI-7 Universal Input 7
 UI-8 Universal Input 8
 UI-9 Universal Input 9
 UI-10 Universal Input 10
 UI-11 Universal Input 11
 UI-12 Universal Input 12
 UI-13 Universal Input 13
 MSTP + Network Line Positive
 MSTP - Network Line Negative

BO Hot 24VAC/DC Input for Relays 1-5*
 BO-0 Relay 1 Output, 24VAC/DC
 BO-1 Relay 2 Output, 24VAC/DC
 BO-2 Relay 3 Output, 24VAC/DC
 BO-3 Relay 4 Output, 24VAC/DC
 BO-4 Relay 5 Output, 24VAC/DC
 BO Hot 2 24VAC/DC Input for Relays 7-9*
 BO-6 Relay 7 Output, 24VAC/DC
 BO-7 Relay 8 Output, 24VAC/DC
 BO-8 Relay 9 Output, 24VAC/DC
 GND Neutral/Ground
 AO-0 Analog Output 0, 0-10V
 AO-1 Analog Output 1, 0-10V
 AO-2 Analog Output 2, 0-10V
 AO-3 Analog Output 3, 0-10V

GND Neutral/Ground
 GND Neutral/Ground
 GND Neutral/Ground
 PSOut 24VAC/DC Hot
 PSOut 24VAC/DC Hot
 PSOut 24VAC/DC Hot
 Power - Neutral/Ground
 Power + 24VAC/DC Hot

GND Neutral/Ground
 AO-04 Analog Output 4, 0-10V
 AO-05 Analog Output 5, 0-10V
 AO-06 Analog Output 6, 0-10V
 AO-07 Analog Output 7, 0-10V
 +19Vdc 19V DC
 GND Neutral/Ground

Fig. 4

*Note: Thermostat Common Relay point (BO Hot) usually 24VAC/DC or R

*Note: AI-2 through AI-5 and BI-2 through BI-5 are wired to UI-2 through UI-5. Each universal Input can only be used as an AI or a BI

Output Wiring

Output/Label

BO0	Fan
BO1	Cooling Valve Open
BO2	Cooling Valve Close
BO3	Heating Valve Open
BO4	Heating Valve Close
AO0	Fan Speed 0-10Vdc 0-100%
AO1	Heating or Cooling 0-10Vdc 0-100%

Input Wiring

Input/Label

UI0	Internal Thermistor
UI1	Internal Humidity/Motion
UI2	External Room Temperature
UI3	
UI4	
UI5	Optional Occupancy Relay

Reserved BACnet Points

The following are points reserved by the thermostat for operation.

Analog Inputs

Instance	Object Name	Description	Read/Write	Default
AI-0	Space Temp	Reading of the internal thermistor in counts. 0-1024	R	variable
AI-1	Humidity	Reading from the Humidity sensor add-on card	R	variable
AI-2	Ext. Room Temp	Optional external room temperature input	R	variable
AI-3	Analog Input 03	Reading of the external input 3 in counts. 0-1024	R	variable
AI-4	Analog Input 04	Reading of the external input 4 in counts. 0-1024	R	variable
AI-5	Analog Input 05	Reading of the external input 5 in counts. 0-1024	R	variable

Analog Outputs

Instance	Object Name	Description	Read/Write	Default
AO-0	Fan Speed	0-10V output for control of fan speed	R/W	0.0
AO-1	Heat or Cool	0-10V output for control of heating or cooling. Use BV-52 to select output control.	R/W	0.0
AO-2	Analog Output 2	Variable 0-14VDC, 150mA output	R/W	0.0

Analog Values

Instance	Object Name	Description	Read/Write	Default
AV-0	Mode of Operation	The mode that the thermostat is currently in. 0 = Heat Mode 1 = Cool Mode 2 = Idle 3 = Afterhours 4 = Unoccupied Idle 5 = Unoccupied Heat Mode 6 = Unoccupied Cool Mode	R	2
AV-1	Analog Value 001			
AV-2	Analog Value 002			
AV-3	Analog Value 003			
AV-4	Current Htg SP	The setpoint that controls heating. If the room temperature goes below this setpoint the thermostat will enter heating mode.	R	60.0°F/16°C
AV-5	Current Clg SP	The setpoint that controls cooling. If the room temperature goes above this setpoint the thermostat will enter cooling mode.	R	80.0°F/27°C
AV-6	Heating SP	The setpoint used for heating during occupied mode. This setpoint is calculated by AV-66 (Current SP) – AV-70 (Heating Offset)	R	72.0°F/22.5°C
AV-7	Cooling SP	The setpoint used for cooling during occupied mode. This setpoint is calculated by AV-66 (Current SP) + AV-69 (Cooling Offset)	R	74.0°F/23.5°C
AV-8	Heat Signal (%)	Current heating signal as a percent	R	0%
AV-9	Cool Signal (%)	Current cooling signal as a percent	R	0%
AV-10	Analog Value 010			
AV-11	Analog Value 011			
AV-12	Analog Value 012			
AV-13	Analog Value 013			
AV-14	Analog Value 014			
AV-15	Analog Value 015			
AV-16	Analog Value 016			
AV-17	Analog Value 017			
AV-18	Analog Value 018			
AV-19	Analog Value 019			
AV-20	Room Temp	Selected from either AI-0 or AI-2. BV-67 is used for selection. This is the value displayed on the LCD of the thermostat and should be used to display the temperature on any workstation display.	R	variable
AV-21	Clg Control Signal	Signal used to control the floating or modulating cooling outputs	R	0%
AV-22	Htg Control Signal	Signal used to control the floating or modulating heating outputs	R	0%
AV-23	Analog Value 023			
AV-24	Heating Valve % Open	The percentage open that the heating valve has been commanded.	R/W	0%
AV-25	Cooling Valve % Open	The percentage open that the cooling valve has been commanded.	R/W	0%
AV-26	Cooling Deviation	Number of degrees that the room temperature is away from the cooling setpoint	R	variable

AV-27	Heating Deviation	Number of degrees that the room temperature is away from the heating setpoint	R	variable
AV-28	Deviation from SP	Number of degrees that the room temperature is away from the room setpoint	R	variable
AV-29	Zone Scan	Numerical representation of the thermostat's mode. 100 = full heat, -100 = full cool	R	0
AV-30	AI-0 Setup	Parameter used to set the input type. 0 = counts 1 = temperature 2 = 4-20mA 3 = 0-5V 4 = 0-10V 5 = pulse	R	1
AV-31	AI-1 Setup	See AV-30	R	0
AV-32	AI-2 Setup	See AV-30	R	0
AV-33	AI-3 Setup	See AV-30	R	0
AV-34	AI-4 Setup	See AV-30	R	0
AV-35	AI-5 Setup	See AV-30	R	0
AV-36	Analog Value 036			
AV-37	Analog Value 037			
AV-38	Analog Value 038			
AV-39	Analog Value 039			
AV-40	Analog Value 040			
AV-41	Analog Value 041			
AV-42	Max Heat Fan Speed	The maximum speed for the fan during heat mode	R/W	75%
AV-43	Max Cool Fan Speed	The maximum speed for the fan during cool mode	R/W	100%
AV-44	Min Fan Speed	The minimum speed for the fan during heat or cool mode	R/W	40%
AV-45	Heating % for Fan	The heating signal percentage that is required to command the fan ON.	R/W	10%
AV-46	Cooling % for Fan	The cooling signal percentage that is required to command the fan ON.	R/W	10%
AV-47	Filter Alarm SP	The number of runtime hours the filter can run before triggering an alarm	R/W	3000 hrs
AV-48	Heating Valve Deadband	The deadband used to determine when to open or close the damper	R/W	5%
AV-49	Heating Valve Motor Time	The amount of time to open the damper from 0% open to 100% open	R/W	90 sec
AV-50	Heating Kp	Proportional constant for Heating PI Loop	R/W	12
AV-51	Heating Ki	Integral Constant for Heating PI Loop	R/W	1
AV-52	Cooling Kp	Proportional constant for Cooling PI Loop	R/W	12
AV-53	Cooling Ki	Integral Constant for Cooling PI Loop	R/W	1
AV-54	Cooling Valve Deadband	The deadband used to determine when to open or close the damper	R/W	5%
AV-55	Cooling Valve Motor Time	The amount of time to open the damper from 0% open to 100% open	R/W	90 sec
AV-56	Filter Runtime	The amount of runtime hours for the filter	R	0 hrs
AV-57	Fan Runtime	The amount of runtime hours for the fan	R	0 hrs
AV-58	Reserved	Reserved for thermostat use only. Do not write to this point.	R	1.6

AV-59	Ave Time Base	Factor used to average the room temperature. A small number will allow the room temperature to change faster over time. A large number will cause the room temperature to change slower over time.	R	100
AV-60	Cal Offset	The calibration offset for the internal thermistor.	R	variable
AV-61	Space Alarm Offset	This offset +/- the Current Cooling/Heating SP is used to determine if the space is too warm/cold, and set an alarm if necessary.	R/W	5.0°F/2.5°C
AV-62	# of Fan Speeds	Select the number of fan speeds for a multispeed fan. 0 = Auto Only 1 = AUTO - ON 2 = Off - AUTO - ON 3 = Off-1-2-AUTO 4 = Off-1-2-3-AUTO	R/W	0
AV-63	Current Fan Speed	The fan speed the thermostat is currently running. 0 = OFF 1 = Fan Speed 1 2 = Fan Speed 2 3 = Fan Speed 3 4 = AUTO 5 = ON	R	4
AV-64	Vacant Cooling SP	When a room is known vacant, the setpoint can be set below the unoccupied setpoint.	R/W	85.0°F
AV-65	Vacant Heating SP	When a room is known vacant, the setpoint can be set below the unoccupied setpoint.	R/W	55.0°F
AV-66	Room Setpoint	The occupied room setpoint	R/W	73.0°F/23.0°C
AV-67	Occupied Sp Hi Limit	The maximum occupied room setpoint allowed.	R/W	85.0°F/30.0°C
AV-68	Occupied Sp Lo Limit	The minimum occupied room setpoint allowed	R/W	55.0°F/13.0°C
AV-69	Clg Offset	The offset from Room Setpoint used to calculate the Occupied Cooling SP	R/W	1.0°F/0.5°C
AV-70	Htg Offset	The offset from Room Setpoint used to calculate the Occupied Heating SP	R/W	1.0°F/0.5°C
AV-71	Unoccupied Clg SP	The cooling setpoint used when the thermostat is unoccupied.	R/W	80.0°F/27.0°C
AV-72	Unoccupied Htg SP	The heating setpoint used when the thermostat is unoccupied.	R/W	60.0°F/16.0°C
AV-73	After Hours Limit	The maximum hours the thermostat is allowed to run during afterhours time. Setting this will set the thermostat to occupied operation. (0-99.9 hrs)	R/W	5.0 hrs
AV-74	After Hours Timer	The current amount of afterhours time left.	R	0.0 hrs
AV-75	Reserved	This point is reserved for internal thermostat use and its value cannot be changed	R	0
AV-76	Reserved	This point is reserved for internal thermostat use and its value cannot be changed	R	0
AV-77	Reserved	This point is reserved for internal thermostat use and its value cannot be changed	R	0
AV-78	Reserved	This point is reserved for internal thermostat use and its value cannot be changed	R	0
AV-79	Reserved	This point is reserved for internal thermostat use and its value cannot be changed	R	0

AV-80	Reserved	This point is reserved for internal thermostat use and its value cannot be changed	R	0
AV-81	Motion OFF Delay	The amount of time to delay the ON->OFF transition of the motion sensor occupied command after no motion is detected	R/W	900 sec
AV-82	Analog Value 082			
AV-83	Analog Value 083			
AV-84	Analog Value 084			
AV-100	Analog Value 100	Internal thermistor display descriptor. The present value is automatically transferred. The AV description holds the descriptor to display.	R	variable
AV-101	Analog Value 101	Display descriptor. Transfer the value to display to the present value. The AV description holds the descriptor to display.	R/W	
AV-102	Analog Value 102	Display descriptor. Transfer the value to display to the present value. The AV description holds the descriptor to display	R/W	
AV-103	Analog Value 103	Display descriptor. Transfer the value to display to the present value. The AV description holds the descriptor to display	R/W	
AV-104	Analog Value 104	Display descriptor. Transfer the value to display to the present value. The AV description holds the descriptor to display	R/W	
AV-105	Analog Value 105	Display descriptor. Transfer the value to display to the present value. The AV description holds the descriptor to display	R/W	
AV-106	Analog Value 106	Display descriptor. Transfer the value to display to the present value. The AV description holds the descriptor to display	R/W	
AV-107	Analog Value 107	Display descriptor. Transfer the value to display to the present value. The AV description holds the descriptor to display	R/W	
AV-108	Analog Value 108	Display descriptor. Transfer the value to display to the present value. The AV description holds the descriptor to display	R/W	
AV-109	Analog Value 109	Display descriptor. Transfer the value to display to the present value. The AV description holds the descriptor to display	R/W	
AV-110	Analog Value 110	Display descriptor. Transfer the value to display to the present value. The AV description holds the descriptor to display	R/W	
AV-111	Analog Value 111	Display descriptor. Transfer the value to display to the present value. The AV description holds the descriptor to display	R/W	
AV-112	Analog Value 112	Display descriptor. Transfer the value to display to the present value. The AV description holds the descriptor to display	R/W	

Binary Inputs

Instance	Object Name	Description	Read/Write	Default
BI-0	Binary Input 00		R	
BI-1	Motion	Motion sensor status from the add-on card	R	
BI-2	Binary Input 02		R	
BI-3	Binary Input 03		R	
BI-4	Binary Input 04		R	
BI-5	Opt. Occupied Relay	Optional occupancy relay input	R	

Binary Outputs

Instance	Object Name	Description	Read/Write	Default
BO-0	Fan S/S	Output for Fan Start/Stop	R/W	OFF
BO-1	Cooling Valve Open	Output to open the cooling valve	R/W	OFF
BO-2	Cooling Valve Close	Output to close the cooling valve	R/W	OFF
BO-3	Heating Valve Open	Output to open the heating valve	R/W	OFF
BO-4	Heating Valve Close	Output to close the heating valve	R/W	OFF
BO-5	Scheduled Occupied	Logical point only. Used for scheduling purposes. INACTIVE is unoccupied.	R/W	OFF

Binary Values

Instance	Object Name	Description	Read/Write	Default
BV-0	Bad Room Sensor	Alarm for a bad internal thermistor	R	OFF
BV-1	H/C Mode	Sequence point to show analog heating or cooling. OFF = Cooling ON = Heat	R	OFF
BV-2	Binary Value 002			
BV-3	Binary Value 003			
BV-4	Binary Value 004			
BV-5	Binary Value 005			
BV-6	Binary Value 006			
BV-7	Binary Value 007			
BV-8	Binary Value 008			
BV-9	Space Alarm Delay	Delay used to prevent a space alarm after receiving an occupied command. The delay is 7200 sec	R	OFF
BV-10	Program Status	Used to determine if the sequence was loaded correctly on a BACnet Restore or power up.	R	OFF
BV-11	Binary Value 011			
BV-12	Binary Value 012			
BV-13	Binary Value 013			
BV-14	Night Heating Request	Unoccupied heating request	R	OFF

BV-15	Night Cooling Request	Unoccupied cooling request	R	OFF
BV-16	Night Heating Request Status	Unoccupied heating request command	R	OFF
BV-17	Night Cooling Request Status	Unoccupied cooling request command	R	OFF
BV-18	Binary Value 018			
BV-19	Binary Value 019			
BV-20	Binary Value 020			
BV-21	Binary Value 021			
BV-22	Too Warm Status	Status of the Too Warm Alarm before checking the Space Alarm Delay	R	OFF
BV-23	Too Cool Status	Status of the Too Warm Alarm before checking the Space Alarm Delay	R	OFF
BV-24	Space Too Warm Alarm	The space temperature has been below the Room Set point (AV-66) – Space Alarm Offset (AV-61) for at least 7200 seconds.	R	OFF
BV-25	Space Too Cool Alarm	The space temperature has been above the Room Set point (AV-66) + Space Alarm Offset (AV-91) for at least 7200 seconds.	R	OFF
BV-26	Binary Value 026			
BV-27	Binary Value 027			
BV-28	Filter Alarm	The filter runtime has exceeded the filter runtime setpoint (AV-47)	R	OFF
BV-29	Binary Value 029			
BV-30	Binary Value 030			
BV-31	Binary Value 031			
BV-32	Binary Value 032			
BV-33	Binary Value 033			
BV-34	Binary Value 034			
BV-35	Binary Value 035			
BV-36	Binary Value 036			
BV-37	Binary Value 037			
BV-38	Heating Lockout	Status for this point is transfer to the thermostat to lockout the heating	R	OFF
BV-39	Binary Value 039			
BV-40	Occupied Status	The status of this point switches the thermostats occupancy settings. ON when the thermostat is in Occupied Setpoint Mode or After Hours Mode.	R	OFF
BV-41	Opt. Start Warmup	A Warmup command has been sent to the thermostat. When ON the thermostat will switch to occupied settings.	R/W	OFF
BV-42	Opt. Start Cooldown	A Cooldown command has been sent to the thermostat. When ON the thermostat will switch to occupied settings.	R/W	OFF
BV-43	Occ Set point Mode	The thermostat has been commanded occupied via BO-5, or a Warmup/Cooldown command has been sent via BV-41/BV-42.	R	OFF
BV-44	After Hours Status	The thermostat has been set to after hours mode. When ON the thermostat will switch to occupied settings.	R	OFF
BV-45	Reserved	Reserved for thermostat use only. Do not write to this point.	R	
BV-46	Binary Value 046			

BV-47	Binary Value 047			
BV-48	Binary Value 048			
BV-49	Update Descriptors	When ON descriptor changes are sent to the thermostats LCD, this point will auto reset to OFF.	R/W	OFF
BV-50	Binary Value 050			
BV-51	BI for Occupancy	ON = BI will be used to indicate zone occupancy OFF = BI is not used for occupancy	R/W	OFF
BV-52	Modulating Output Control	Selects whether the modulating output is controlled for heating or cooling. INACTIVE = Heat ACTIVE = Cool	R/W	OFF
BV-53	Binary Value 053			
BV-54	Binary Value 054			
BV-55	Binary Value 055			
BV-56	Binary Value 056			
BV-57	Disable Splash	When ACTIVE, the "EXACTLOGIC" splash will not show after key presses	R/W	OFF
BV-58	Disable Setup Menu	When ACTIVE, there will be no access to the Setup Menu where the Network/MAC/Baud Rate is set	R/W	OFF
BV-59	Disable FSM Menu	When ACTIVE, there will be not access to the Field Service Mode where the Time/Schedule/Point Access is set	R/W	OFF
BV-60	Binary Value 060			
BV-61	Binary Value 061			
BV-62	Binary Value 062			
BV-63	Binary Value 063			
BV-64	Enable Motion	When ACTIVE, the power to the Motion add-on card is set to the proper voltage	R/W	OFF
BV-65	Binary Value 065			
BV-66	Binary Value 066			
BV-67	Room Temp Select	When OFF, the internal thermistor is selected for the control sequence. When ON, an external thermistor attached to AI-2 is selected for control of the sequence	R/W	OFF
BV-68	Backlight Off/On	When ON the LCD backlight will remain on.	R/W	OFF
BV-69	Fan Op Mode	Controls if the fan will cycle on by heating/cooling signal or by schedule. OFF = Schedule, ON = H/C Signal	R/W	OFF
BV-70	Room Vacant Status	When ON the thermostat will run on Vacant Heating/Cooling setpoints, AV-64/AV-65.	R/W	OFF
BV-71	C/F	Sets the thermostat to display temperatures in Celsius or Fahrenheit. This point is set through the setup menu. ON = F, OFF = C	R	ON
BV-72	Binary Value 072			
BV-73	Binary Value 073			
BV-74	Hotel Mode	This point is reserved for internal thermostat use and its value cannot be changed	R	OFF
BV-100	Binary Value 100	Enable internal thermistor descriptor	R/W	ON
BV-101	Binary Value 101	Enable descriptor	R/W	OFF
BV-102	Binary Value 102	Enable descriptor	R/W	OFF
BV-103	Binary Value 103	Enable descriptor	R/W	OFF
BV-104	Binary Value 104	Enable descriptor	R/W	OFF
BV-105	Binary Value 105	Enable descriptor	R/W	OFF

BV-106	Binary Value 106	Enable descriptor	R/W	OFF
BV-107	Binary Value 107	Enable descriptor	R/W	OFF
BV-108	Binary Value 108	Enable descriptor	R/W	OFF
BV-109	Binary Value 109	Enable descriptor	R/W	OFF
BV-110	Binary Value 110	Enable descriptor	R/W	OFF
BV-111	Binary Value 111	Enable descriptor	R/W	OFF
BV-112	Binary Value 112	Enable outside air descriptor	R/W	OFF